


For use with : Boiler, Cooling Tower, Electric Motors and Drives, HVAC

[Motor on-off Data Logger \(UX90-004M\)](#)




## Quick Start Guide

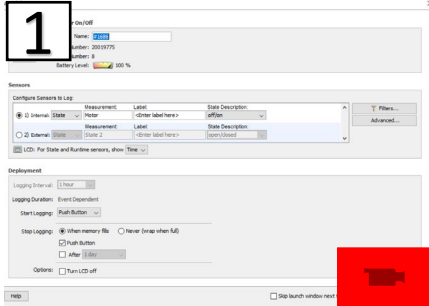

### 1. Launch Logger


Click on image to see video for how to launch a motor on-off logger.

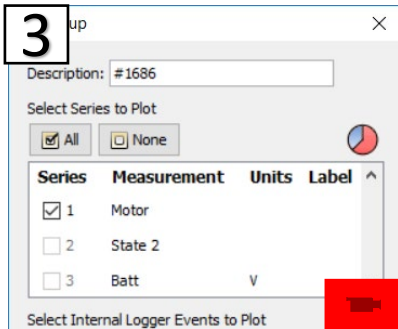


### 3. Readout and Plot

Click on image to see video for how to readout and plot of motor on-off data logger.


## 2 Motor on-off logger placement: Follow instructions below

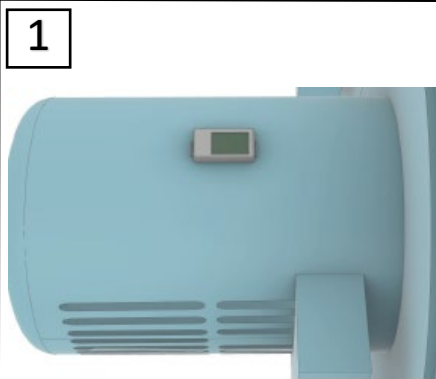


1 Place the motor on-off logger on the motor housing, use the magnets behind the logger to attach on the motor.

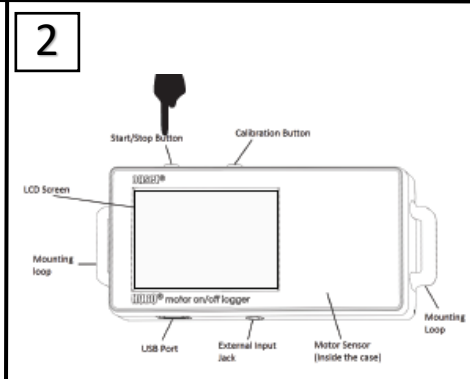

2 Press the start button on the logger to initiate the logger.

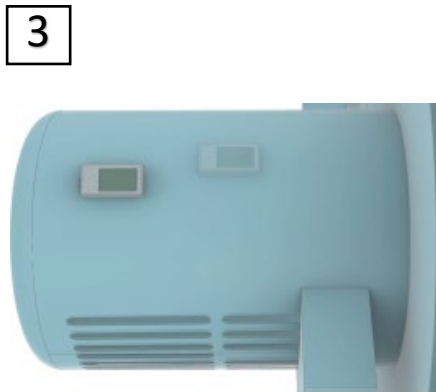

3 Adjust the placement of the logger if the signal is showing low on the logger, make sure signal strength is full.

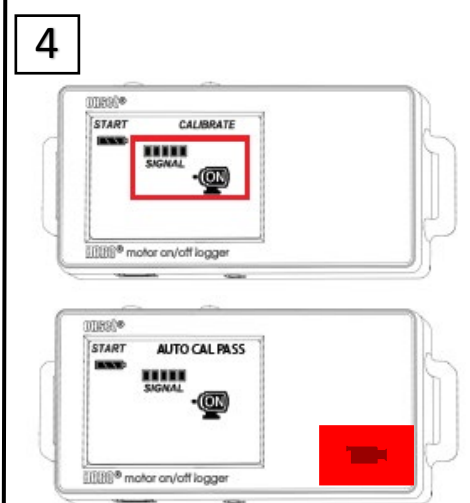

4 Press and hold the calibrate button until the screen displays AutoCalPass.

*Click on image to see video on how to install on-site.*