





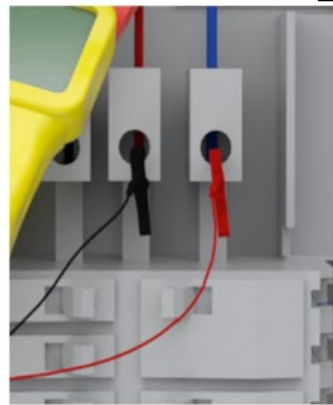
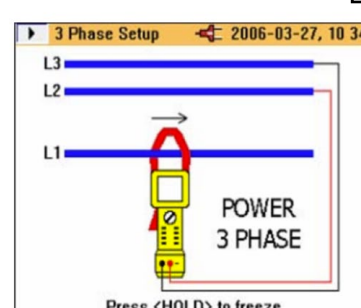


For use with : **Boiler, Chiller, Electric Motors and Drives, HVAC, Lighting**

[Fluke Power Quality Clamp Meter](#)
(Fluke 345)



Quick Start Guide

<p>1 Wear Electrical Safety Gloves rated depending on maximum voltage use</p> 	<p>2 Turn off electricity to panelboard</p> 	<p>3 To measure three-phase power turn the Function Selector to W3ϕ.</p> 
<p>4 Take two alligator clips and insert them into the voltage terminal inputs.</p> 	<p>5 Press and hold the Current Clamp Trigger to open the red clamps.</p> 	<p>6 Clamp one of the main feed lines in a panelboard or switchgear.</p> 
<p>7 Connect the alligator clips to the metal contacts of the other two main feeds.</p> 	<p>8</p> 	<p>9</p> 